

INDASH by PANAVISE®

I-75102-304

Page 1 of 1

MOUNTING LOCATION:

Upper Right side of Console/DUR

TOOLS REQUIRED:

Dash Tool, Hook Tool

T-25 Torx driver

Cutting Tool/Knife

HARDWARE INCLUDED:

None

CELL PHONE & MEDIA MOUNT INSTALLATION INSTRUCTIONS

PART#: 75102-304

MFG: AUDI

MODELS & YEARS:

A8 2004-2007

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

STEP #1: Apply parking brake. Move shifter into D. Remove ashtray insert. Remove T-25 Torx screw behind insert. Remove ashtray assembly.


STEP #2: Remove (2) T-25 Torx screws below the climate control. Lift up on the sides of the console bezel by ashtray cavity to release (2) clips. Continue to pull up to release (2) more clips by the front of the cup holder (L&R).

STEP #3: Pull out the climate control and move it down into console cavity. Remove the T-25 Torx screw to the right side of the climate control cavity.

STEP #4: Place the InDash by PanaVise Mount in place to see what area of the dash needs to be trimmed to allow the mount to fit flush to the side of the console.

STEP #5: Place the InDash by PanaVise Mount over the screw hole and replace the screw. Replace the bezel and ashtray in reverse order.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.

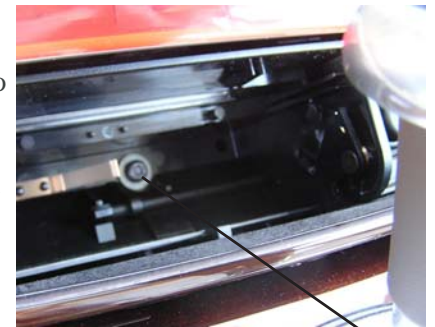

T-25 screw behind ashtray



InDash installed showing location



Dash edge to trim area



08-11-06